

RAM PISTONS

The ram pistons are not handed and can be fitted to either side of the vehicle.

Right Hand Side

- Route the rams and hoses across the rear building bracket. under the insulation and carpet to the right hend rem
- 21 Fit the U shaped pivot bracket to the bottom of the rem using clevis pin, 2 M3 plain washers and circlips
- Fit M8 flange nut to the threaded stud on the buttorn the nut and the bottom of the bracket leaving 20 mm of exposed thread between the hottern #f the pivot bracket with the flange facing cownwelled 2
- Fit the RH ram piston to adjustment will be required Secure with M8 flange nut. Do the ram mounting treated not fully Hghten,
- 2 Secure the ball joint at the top of the ram platen to the bood lifter bracket with MB locknut Tighten to 1994m and fit plastic cover.


25 Secure the hoses to the rear panel with tape WARNING:


Ensure the hoses are secure and clear of maving Ensure the hoses are not kinked or under etrain




The instructions for fitting the right hand pluton are the same as the left hand. Left Hand Side



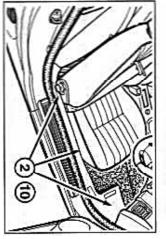

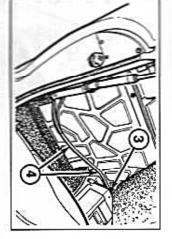

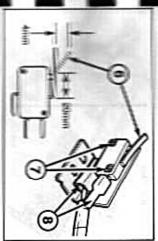


POWER HOOD HARNESS

- Remove 2 screws, release 2 tumbuckles and remove fuse box cover.
- Locate the 2 way connector with White/Red and Pull back the carpet in the driver's footwell and along the door sill.
- Route the harness under the carpet and insulation along the pump connector. Black/White wires on the Power Hood Harness and fit to
- buildhead behind the hood mounting bracket. and Black wires on the harness and route up the rear Locate the two one way connectors with Yellow/Brown the bottom of the bulkhead panel and tape it in place.
- WARNING: Ensure the wires are clear of moving parts.
- Locate the micro-switch in the kit and bend the actuating
- NOTE: Fit the micro-switch to the angle bracket with 2 M3x16mm screws and ruds. lever as shown in the diagram.

screw heads are flush with the surface of the switch. Countersink the switch fixing holes so that the

- Connect the two one way connectors to the upper and lower terminals. (The middle terminal is not used).
- MOTE The connectors can be fitted to either terminal.
- Fit the assembled switch to the hood lifter bracket with 2 lever against rear hood. Stick and tighten screws Close hood, adjust micro switch bracket to align switch M5x8mm domed hex-head screws.
- ö Route the remaining harness under the carpet, down the door post, along the sill and up to the tuse box.

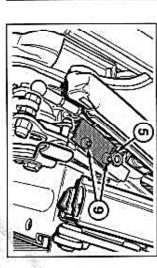

MONTH ING INSTRUCTIONS