



## HARD TOP STOWAGE




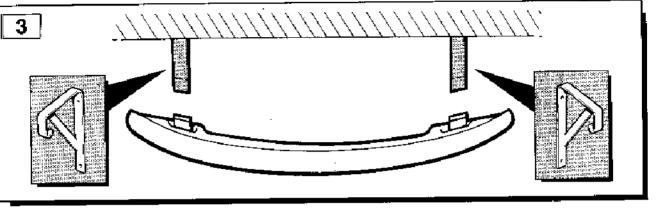


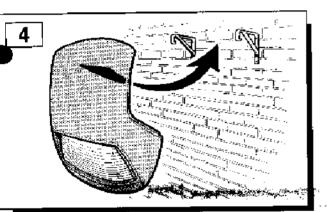

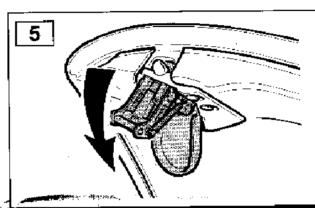

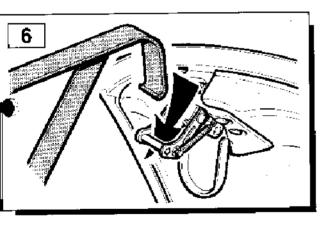

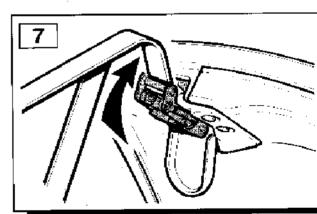

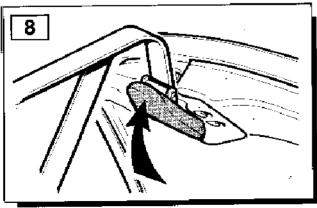

Fitting Instruction No. VUB 101360