





Fitting Instruction No. VUB 103860

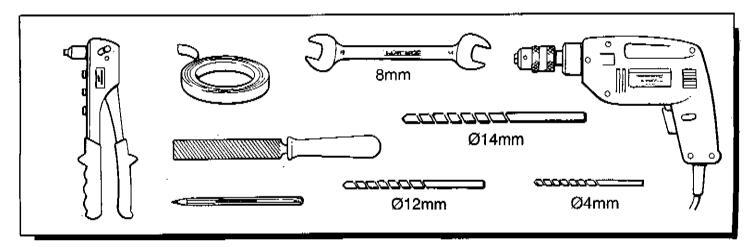


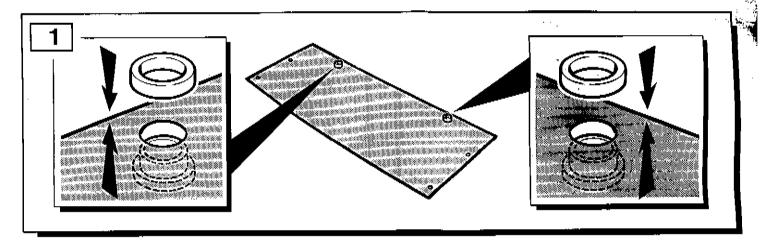

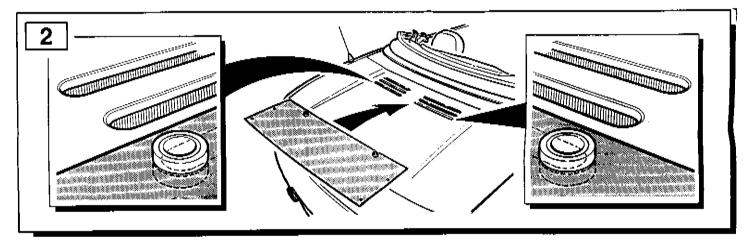





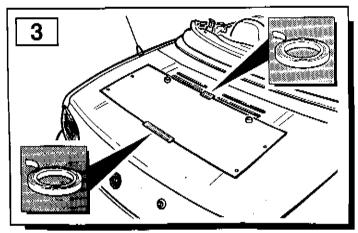


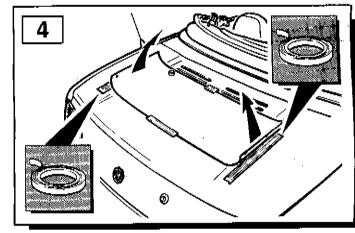



Fitting Instruction No. VUB 103860

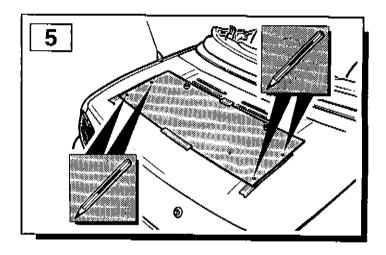


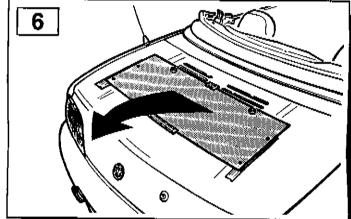


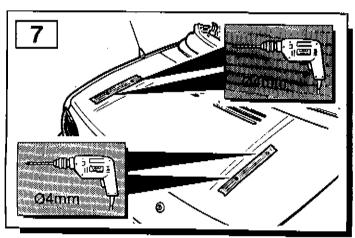


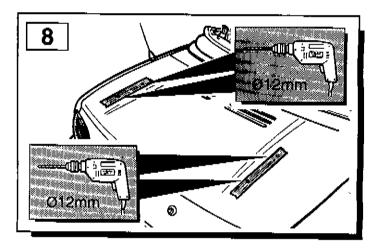

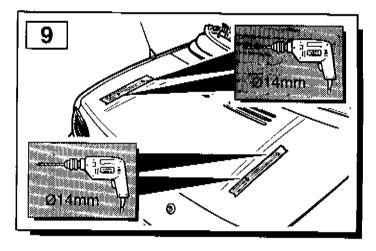


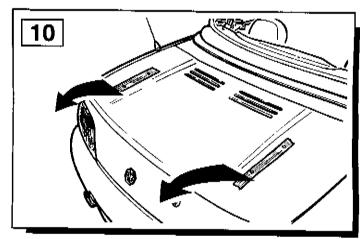


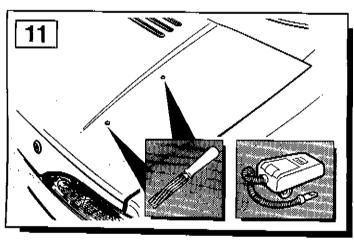


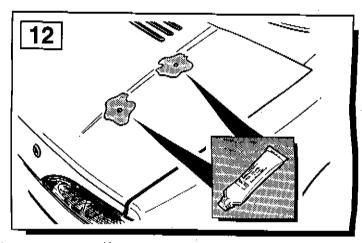



Fitting Instruction No. VUB 103860

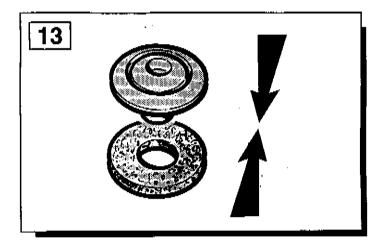


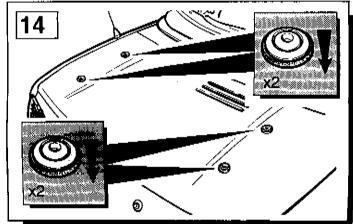


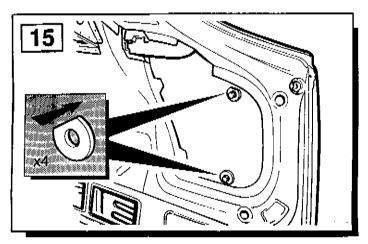


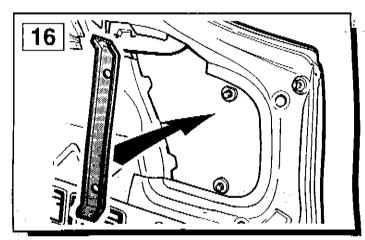


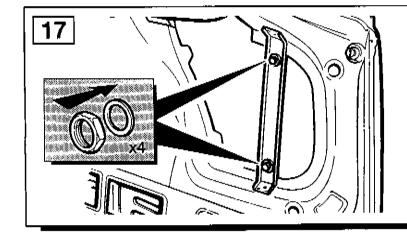


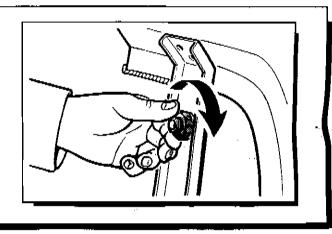


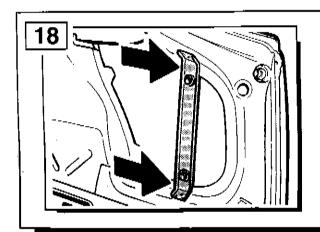


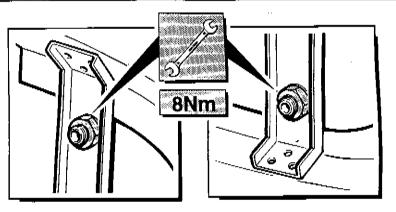


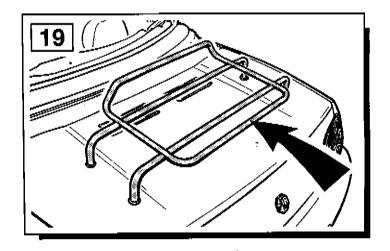


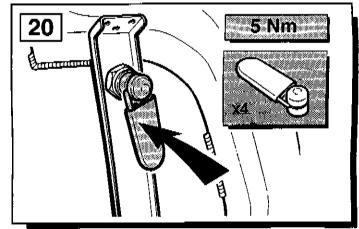


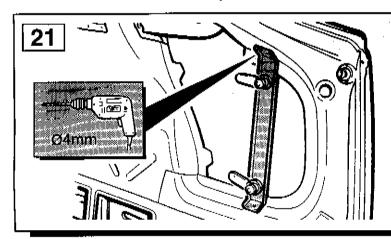

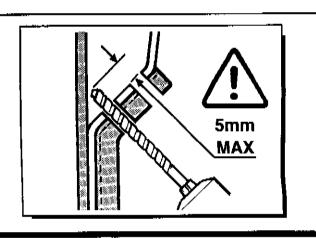

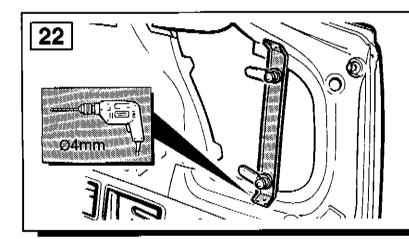


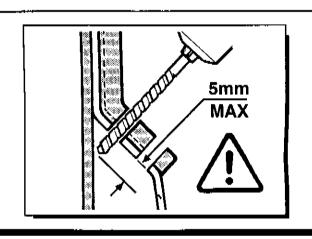


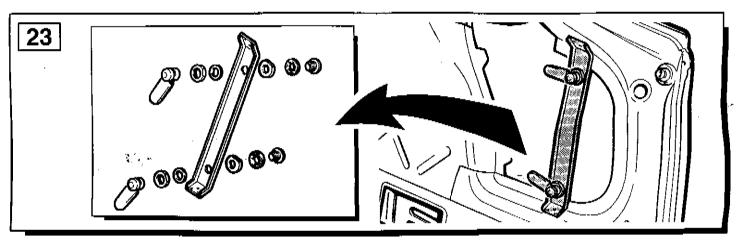



Fitting Instruction No. VUB 103860




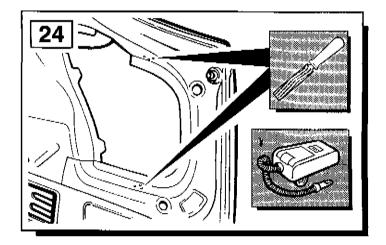


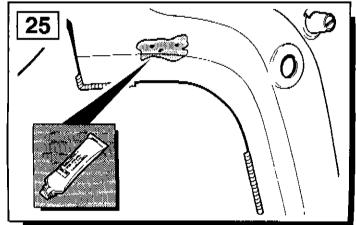


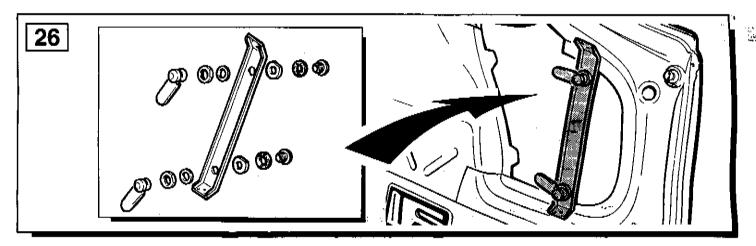

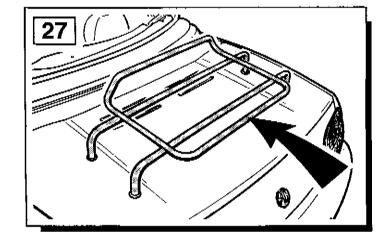


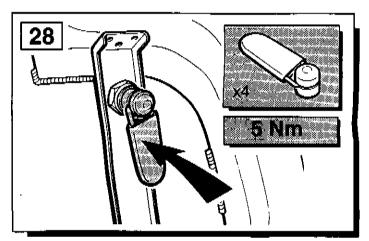


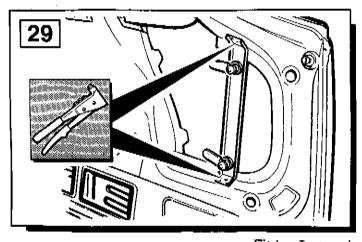


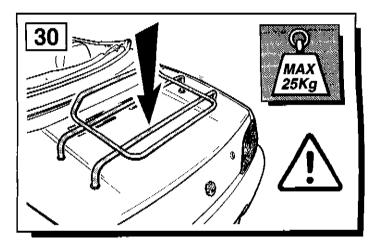


Fitting Instruction No. VUB 103860

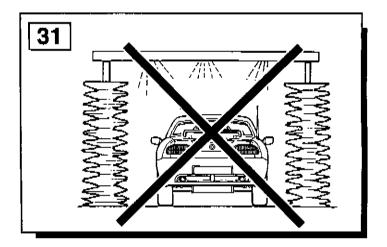

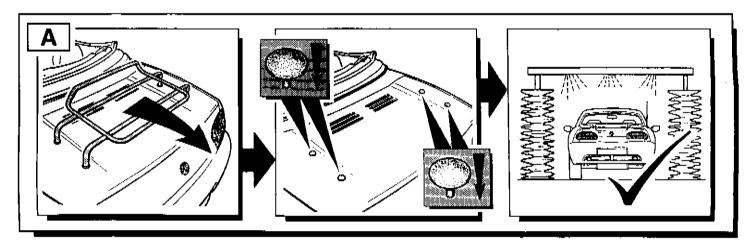

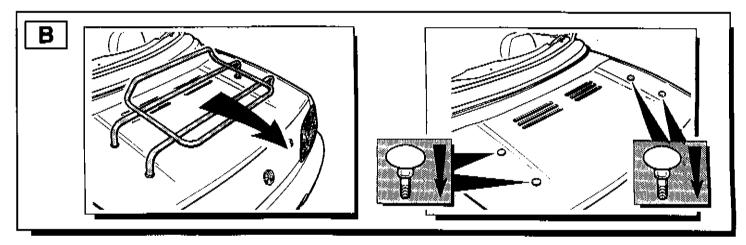





INSTRUCTION DE MONTAGE

Galerie MGF

ISTRUZIONI PER L'USO

Rastre liera portabagagli MGF

INSTRUCCION DE MONTAJE

Baca para maletero MGF

INSTRUÇOES DE MONTAGEM

Prateliera/de bagagem MGF

MONTAGE-HANDLEIDING

Bagagerek MGF