


BODY

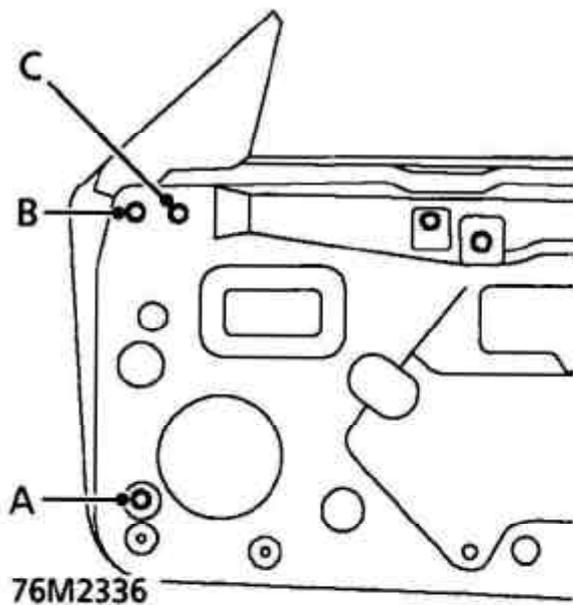

9. Close door and check cheater is positioned correctly, this can be judged by the bulge made by the glass on the 'A' post seal which should be uniform along the seal.
10. Fit speaker *See ELECTRICAL, Repairs.*
11. Fit door trim casing *See Doors.*

4. Lower window and loosen screws **B** and **C**.
5. Loosen lock-nut on adjuster **A**, position adjuster screw so that it is level with the back of the nut it screws in to.
6. Push cheater down and pull inboard as far as possible.
7. Hold cheater in this position and tighten screws **B** and **C**, and the adjuster lock nut **A**.
8. Entire window can be raised and lowered smoothly.